

## UNLOCKING MAXITROL REGULATOR

MODELS: ALL MODELS



### WARNING

LP & NG ARE EXTREMELY FLAMMABLE SO  
TAKE EXTRA PRECAUTIONS WHEN  
PERFORMING ANY WORK TO THE HEATER

If the Maxitrol regulator supplied with your Aquastar is fed gas or air tested at too high a pressure it will cause it to “lock up” and stop delivering gas to heater. This is the method for “unlocking” Procedure should only be performed by a licensed gas technician

- Shut off main gas supply to heater.
- Locate Maxitrol regulator at bottom of Aquastar.
- Unscrew slotted cap.
- The inner plug needs to be returned to the same spot after unlocking so count threads or measure to facilitate this.
- Turn inner plug counter-clockwise to remove.
- Remove spring (do not lose).
- Use pencil with eraser on end to push in on the diaphragm to return to unlocked position.
- Install spring first, then install plug and turn clockwise to return to measured position.
- Reinstall slotted cap.
- Return heater to service after correcting over pressure situation.

